


# Getting Started with GL.iNet Mini Travel Router

Models:

GL-MT300N, GL-MT300N-V2

GL-AR150, GL-AR150-PoE, GL-AR150-Ext-2, GL-AR150-Ext-PoE-2


GL-AR300M, GL-AR300M-Ext, GL-AR300M16, GL-AR300M16-Ext, GL-AR300M-Lite

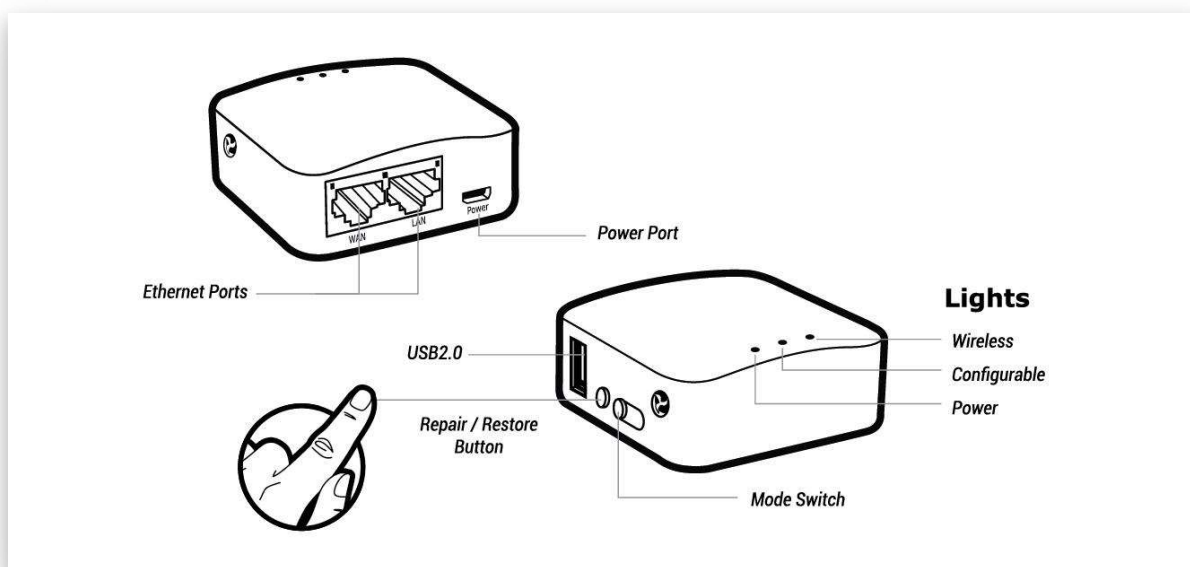

*Note: GL-AR300M-Lite has one Ethernet port only.*

## 1. Power on

Plug the Micro USB power cable into the power port of the router. Make sure you are using a standard 5V/2A power adapter. Otherwise it may cause malfunction.

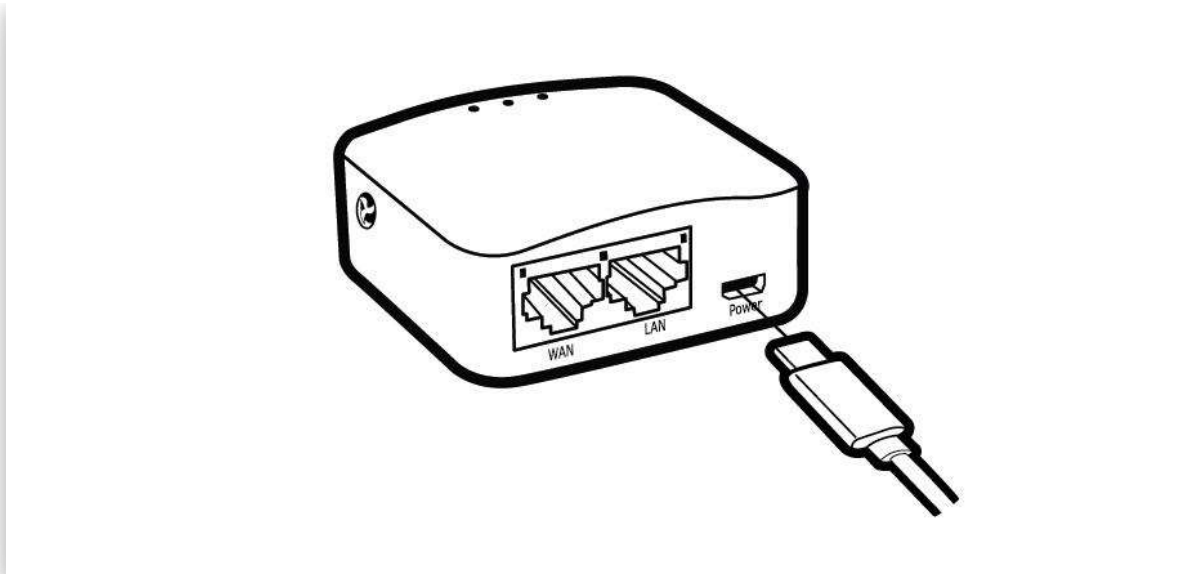


## 2. Connect

You can connect to the router via Ethernet cable or Wi-Fi.

*Note: This step only connects your devices to the local area network (LAN) of the router. You cannot access the Internet currently. In order to connect to the Internet, please finish the setup procedures below and then follow [Internet](#) to set up an Internet connection.*

### Connect via LAN

Connect your device to the LAN port of the router via Ethernet cable.

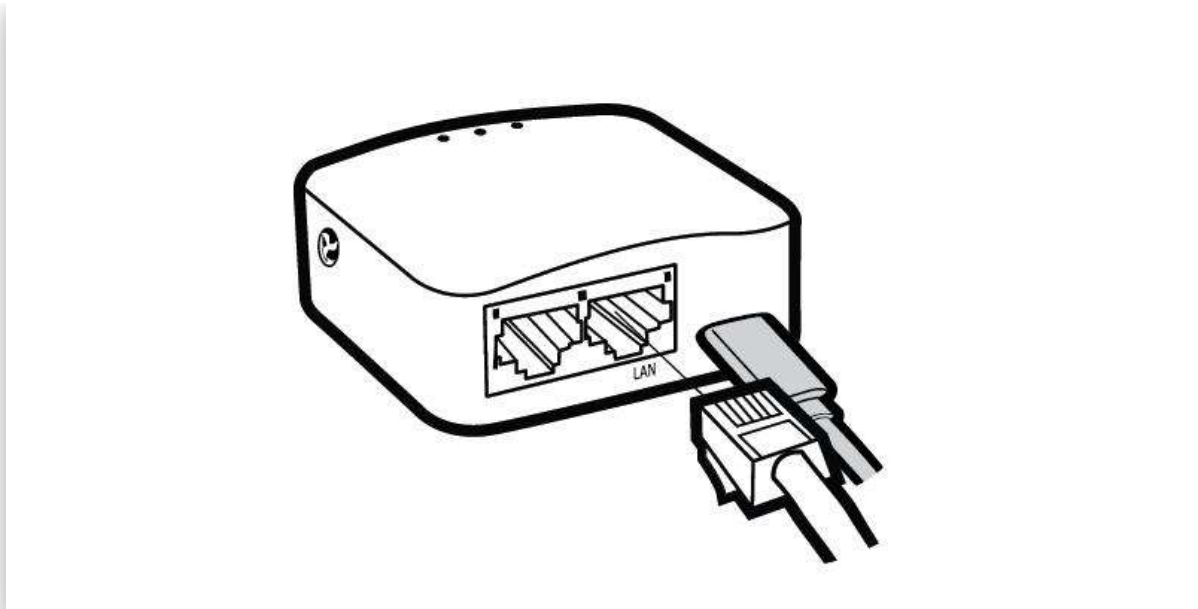

*Note: GL-AR300M-Lite has only 1 Ethernet port which works as WAN by default. You can only connect to it via Wi-Fi when you first set up the router. Once you have connected to it, you can change the WAN port to LAN port in [Internet](#) so that you can connect to it via Ethernet cable.*

## Connect via Wi-Fi

Search for the SSID of the router in your device and input the default password: **goodlife**.

*Note: The SSID was printed on the bottom label of the router with the following formats:*


- **GL-MT300N-XXX**
- **GL-MT300N-V2-XXX**
- **GL-AR150-XXX**
- **GL-AR300M-XXX**
- **GL-AR300M-XXX-NOR**

## 3. Access the web Admin Panel

Open a web browser (we recommend Chrome, firefox) and visit <http://192.168.8.1>. You will be directed to the initial setup of the web Admin Panel.

### 1) Language Setting

You need to choose the display language of the Admin Panel. Currently, our routers support **English, 简体中文, 繁體中文, Deutsch, Français, Español, Italiano 日本語, 한국어 and Русский.**

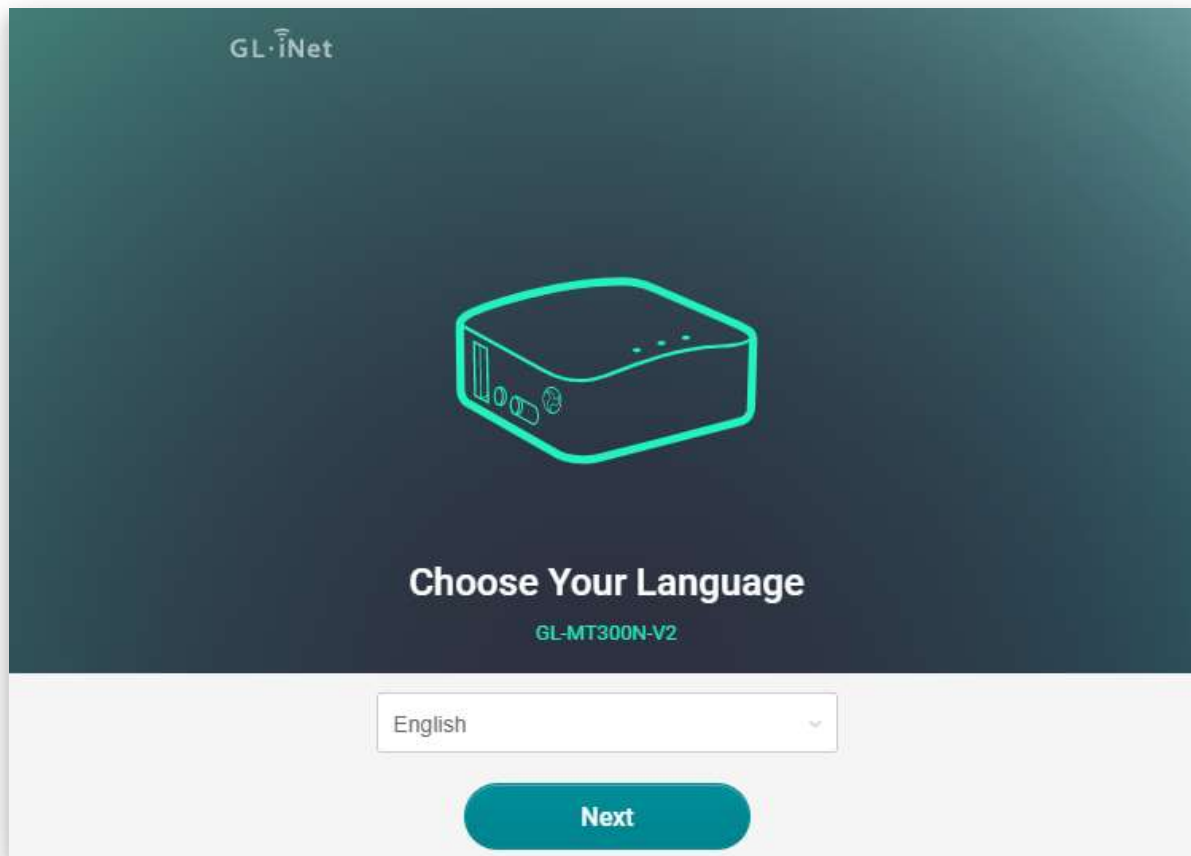

*Note: If your browser always redirects to LuCI (<http://192.168.8.1/cgi-bin/luci>), you can visit: <http://192.168.8.1/index> instead of <http://192.168.8.1>.*

## 2) Admin Password Setting

There is no default password for this Admin Panel. You have to set your own password, which must be at least 5 characters. Then, click `Submit` to proceed.

GL.iNet

## Set Up Your Admin Password

**New Password** 5-32 characters

**Confirm Password** Must be identical to above

Your admin password will be used for configuring everything on the Admin Panel of your router. It is EXTREMELY important to keep it safe.

Back Submit

*Note: This password is for this web Admin Panel and the embedded Linux system. It will not change your Wi-Fi password.*

### 3) Admin Panel

After the initial setup, you will enter the web Admin Panel of the router. It allows you to check the status and manage the settings of the router.

GL.iNet ADMIN PANEL Reboot Logout English


- INTERNET
- WIRELESS
- CLIENTS
- UPGRADE
- FIREWALL
- VPN
- APPLICATIONS
- MORE SETTINGS

Cable ↔

Repeater

Tethering

3G/4G Modem



**GL-MT300N-V2-590**  
GL-MT300N-V2-590-Guest

0 WLAN Clients

1 LAN Clients

**Cable**

No cable detected in WAN. Please plug in an Internet cable.

[Using as WAN, change](#)

**Repeater**

Repeater (STA) is disabled/not configured. [Set up now](#). [Scan](#)

[Saved Networks](#) [Repeater Options](#)

**3G/4G Modem**

No Modem device found. Plug in your USB modem to start.

**Tethering**

No Tethering device found. Plug in your smartphone or USB modem to start.

Copyright © 2021 GL.iNet. All Rights Reserved.